

Installation # 17750 Digital Flow Meter # 16106

This meter display may be mounted anywhere in close proximity that you select. We recommend mounting it in a location where the horse does not come in direct contact with the unit; preferably outside the stall. The meter comes with a 56" long cable. If additional length is needed, one or more extension cables # 16106 EXT (56" lg. each) may be added, which will allow mounting the display meter at any reasonable distance from the flow sensor.

Features / Specifications

The Digital Flow Meter comes with (2) AA batteries.

Meter automatically turns on when water flows through the sensor.

Meter will automatically turn off in 10 seconds when water stops flowing.

Press the "Display Button" to turn on the LCD of the flow meter. Press the button again to display total accumulated flow volume or either the real time flow rate.

"Reset" – Use a ball point pen, paperclip or similar. Press the "reset" button for 4 seconds to reset the total measuring volume to zero. After cleaning the unit, the above procedure is recommended in order to compute the correct volume after cleaning.


Connection – 3/4" BSP Male (will work with garden hose threaded fittings)

Equipped with Low Battery Power Alert

Automatic data memorized when battery power is off.

Flow Rate: 2.4 – 60 liter/min

Accuracy: +/- 10%

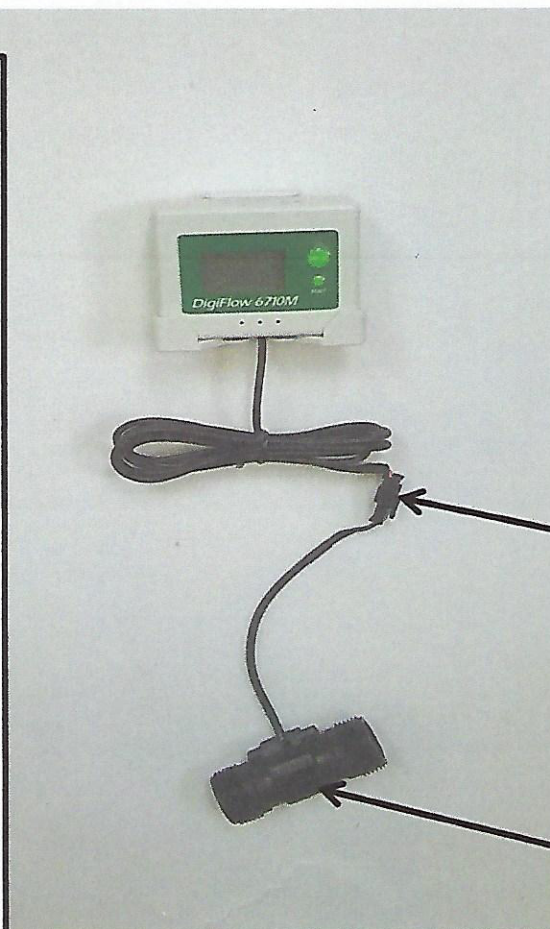

The 56" lg. extension cable (# 16106 EXT) can be mounted at this location. Simply unplug the existing plug, insert and reconnect the extension cable. Multiple cables may be used if necessary. We recommend securing /protecting the cable so the horse cannot damage it.

Flow sensor - the inlet side is marked showing the direction of water flow. This can be mounted vertically or horizontally.

<u>Part No.</u>	<u>Quantity</u>	<u>Description</u>	<u>Retail</u>
#16106	1	3/4" BSP x 3/4" BSP Digital Flow Meter w/inline flow sensor	\$103.35
#16106 EXT	1	56" long Extension Cable with connectors on each end	\$9.00